


SURETHERM 10X

QUICKSTART

UNBOXING

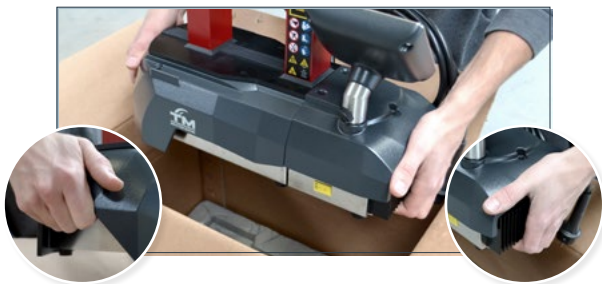


Place one hand underneath the front recess and the other hand grabbing the cooling body. Lift the heater out of the box.

SET UP

1 CONNECT TO THE POWER MAINS

Insert the plug into a shockproof wall socket.

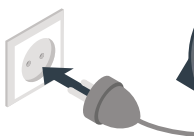

2 TURN ON THE HEATER



Turn main switch from 0 to 1.
After a sound signal the display turns on.

SURETHERM 10X

QUICKSTART

THE WORKPIECE

1 POSITIONING THE WORKPIECE



Place the workpiece in a horizontal or vertical position.

2 CHOOSING THE RIGHT YOKE




Use largest yoke available or stack two yokes to center the workpiece around the yoke.

3 USING THE TEMPERATURE PROBE



Plug in with the red dot facing upwards.

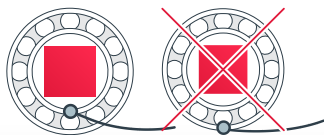

Place the probe on the workpiece near the bore.