

# SURETHERM 20X

## QUICKSTART

### UNBOXING



Hold the heater by the left side of the housing and by the black handle on the U-core.

### SET UP

#### 1 CONNECT TO THE POWER MAINS

Insert the plug into a shockproof wall socket.



#### 2 TURN ON THE HEATER



Turn main switch from 0 to 1.  
After a sound signal the display turns on.

# SURETHERM 20X

QUICKSTART


## THE WORKPIECE

### 1 POSITIONING THE WORKPIECE



Place the workpiece in a horizontal or vertical position.

### 2 CHOOSING THE RIGHT YOKE

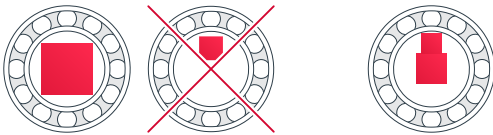


Use largest yoke available or stack two yokes to center the workpiece around the yoke.

### 3 USING THE TEMPERATURE PROBE



Plug in with the red dot facing upwards.

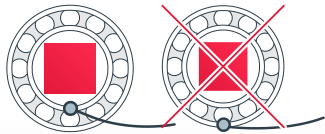

Place the probe on the workpiece near the bore.